

# Installation Manual



Dear friend,

The remote is **not** original remote, just a replacement. When you program the remote, please read the following manual carefully and watch programming video.

Works for 1993-current LiftMaster, Chamberlain, Sears Craftsman brand openers with Purple, Red/Orange, Yellow, Green smart/learn button on the powerhead.



893MAX Video QR code



890MAX Video QR code



373MAX Video QR code



## WARNING

 
 
To prevent possible **SERIOUS INJURY** or **DEATH** from a moving gate or garage door:

- ALWAYS keep remote controls out of reach of children. NEVER permit children to operate or play with remote controls.
- Activate gate or door **ONLY** when it can be seen clearly, is properly adjusted and there are no obstructions to door travel.
- ALWAYS keep gate or garage door in sight until completely closed. NEVER permit anyone to cross path of moving gate or door.

YouTube programming video QR code


**NOTE:** How to program, please also refer to the main block video in the Amazon's product details page.

## PREPARE

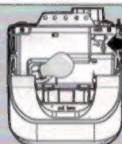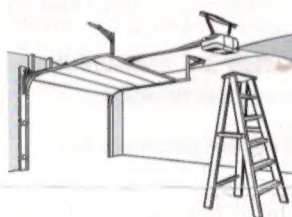


Locate the Learn button on the garage door opener.

 
**NOTE:** Your garage door opener may look different.

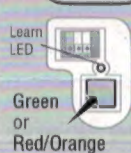

Learn LED  
Green or Red/Orange

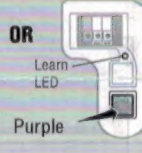 


OR  
Learn LED  
Purple

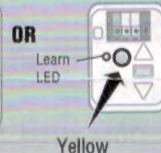 

OR  
Learn LED  
Yellow


Locate the Program button on the remote control.

 Program Button

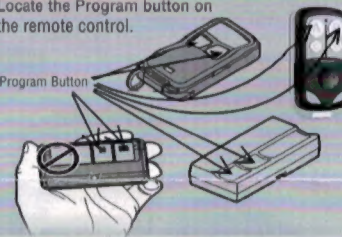

## PROGRAMMING THE REMOTE CONTROL

 - 1 Press and hold the program button at the same time the remote control until the LED on the front of the remote control turns on, then flash 4 times and off. Now turn to step 2 quick.

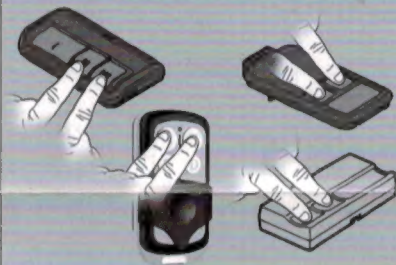

- 2 Press and release the remote control button you wish to use the number of times that corresponds with the garage door opener type:

# of Presses	Garage Door Opener Type
1	Security+ 2.0™ (Yellow Learn Button)
2	315 MHz Security+ (Purple Learn Button)
3	390 MHz Security+ (Red/Orange Learn Button)
4	390 MHz Billion Code (Green Learn Button)

 


- 3 To exit programming mode, press any remote control button **except** the button that was just programmed.




Note: Don't miss this step!

- 4 Press and release the Learn button on the garage door opener.

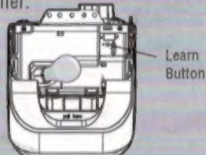


The Learn LED will light.  
Within 30 seconds...

 - 5 Press the remote control button programmed in step 2 until the garage door opener lights flash or two clicks are heard.

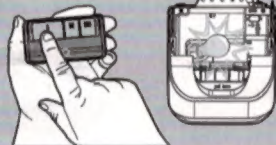

Click  
Click

 - 6 To test, press the programmed button on the remote control...

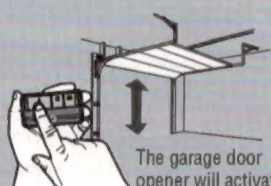

The garage door opener will activate.

- 7 Install the visor clip (applicable for Model J893MAX).






## HOW TO USE THE REMOTE CONTROL

 Press and hold the button down **until** the door or gate starts to move. **Do not release the remote button at once** (Avoiding accidental button presses).

The remote control will operate from up to 3 car lengths away on typical installation.

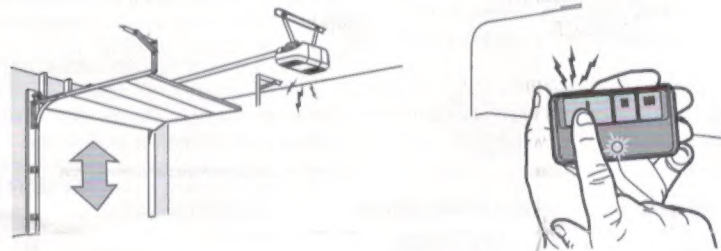

## BATTERY

The LED(s) on your remote control will flash when the battery is low and needs to be replaced.

 
To replace battery, open the case as shown. Insert battery positive side up (+).

Replace the battery with only 3V CR2032 coin cell batteries (depending on the model).

Dispose of old battery properly.


### J893MAX

Pry open the case first in the middle (1), then at each side (2 and 3) with the visor clip.

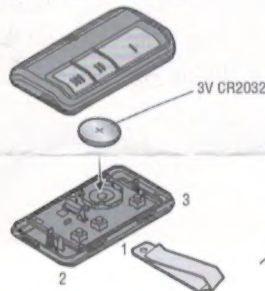


### J890MAX

 Pry open the case with a screwdriver blade.

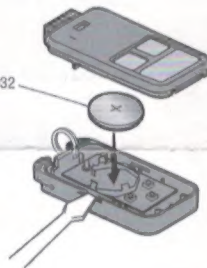

### J373MAX

 Pry open the case with a screwdriver blade.

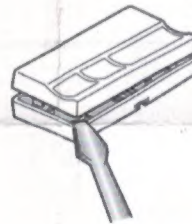

## WARNING

To prevent possible **SERIOUS INJURY** or **DEATH**:

- NEVER allow small children near batteries.

doctor.

To reduce risk of fire, explosion or chemical burn:

- Replace **ONLY** with 3V CR2032
- **DO NOT** recharge, disassemble, heat above 212° F (100° C) or incinerate.

## Troubleshooting

**Solution1:** Your garage door must be closed before you start to program remote, otherwise programming maybe failed.

**Solution2:** Try to program the remote using other button of the remote.

**Solution3:** Please first get close to garage door opener when you program remote.

**Solution4:** Maybe the memory of the opener is full, please clear it then program again.

**Method:** Press and hold the learn button on garage door opener for several seconds until LED off then release.

Then all memory is cleared.

**Note:** The old remote will also be cleared, please program again.

**Solution5:** For some garage door opener with the **red** or **orange** learn button, such as model is **41A5021** or **41A5483**, please choose one of the following solutions:

① Try to select the **Yellow** learn button type;

② please first erase all receiver codes, then continue to program the remote.

**Solution6:** If you think your opener's learn button is **red**, but it can't program successfully by using red learn button type, maybe it has a possibility:

The color of the learn button is faded, it maybe purple learn button. Please try to program the item by using purple learn button type.

**Solution7:** Some door openers, such as model **LiftMaster 8500/Chamberlain RJO20 RJO70 RJO101**, in step 4 of programming, Press the control panel **LEARN** button twice, and the red learn LED will turn on.

**Attention:** In step 4 of programming, please refer to the programming method in the manual of the door opener.

If the issue is not solved, please email us at [datonten@hotmail.com](mailto:datonten@hotmail.com). We could provide video service.

**YouTube programming video :** <https://youtu.be/RBH5Ftk0jGE>  
<https://youtu.be/MfQ5jA11daU>  
<https://youtu.be/oS7JYb6xnNg>

Pay attention to uppercase and lowercase letters in the URL